



## Hassas Tezgah Mengene Yedek Parçaları

### Precision Machinery Vice Spare Parts

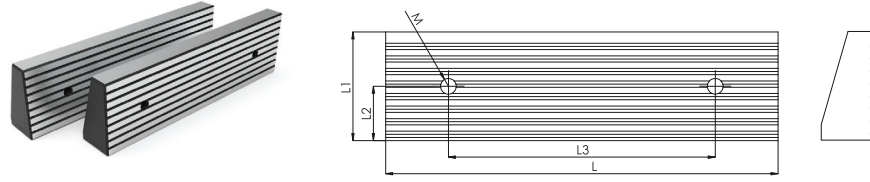


Hassas Tezgah Mengenesi Sert Çene TİP 1500 / Precision Machinery Vices Hard Jaws TYPE 1500

Sipariş Kodu / Order Code	Ölçüler / Dimensions					Ağırlık Weight (Kg.)
	L	L1	L2	L3	M	
CT0126	125	34,5	17	85	M6	1,5
CT0151	150	44	22	95	M6	2
CT0176	175	50	25	105	M6	3
CT0201	200	53	26	135	M8	3,5

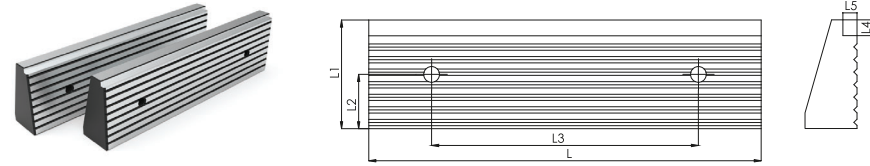

Hassas Tezgah Mengenesi Sert Çene TİP 1850 / Precision Machinery Vices Hard Jaws TYPE 1850

Sipariş Kodu / Order Code	Ölçüler / Dimensions							Ağırlık Weight (Kg.)
	L	L1	L2	L3	L4	L5	M	
CT0132	125	34,5	17	85	3	3	M6	1,5
CT0157	150	44	22	95	3	3	M6	2
CT0182	175	50	25	105	3	3	M6	3
CT0207	200	53	26	135	3	3	M8	3,5

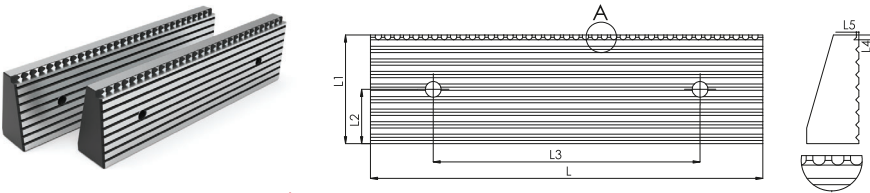


Hassas Tezgah Mengenesi Sert Çene TİP 1250 / Precision Machinery Vices Hard Jaws TYPE 1250

Sipariş Kodu / Order Code	Ölçüler / Dimensions							Ağırlık Weight (Kg.)
	L	L1	L2	L3	L4	L5	M	
CT0130	125	34,5	17	85	3	3	M6	1,5
CT0155	150	44	22	95	3	3	M6	2
CT0180	175	50	25	105	3	3	M6	2,5
CT0205	200	53	26	135	3	3	M8	3,5

## Hassas Tezgah Mengene Yedek Parçaları

### Precision Machinery Vice Spare Parts

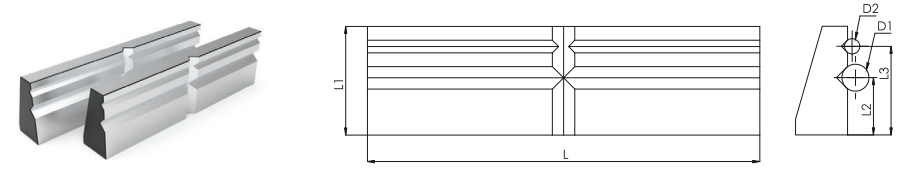

Hassas Tezgah Mengenesi Sert Çene TİP 1750 / Precision Machinery Vices Hard Jaws TYPE 1750

Sipariş Kodu / Order Code	Ölçüler / Dimensions						Ağırlık Weight (Kg.)
	L	L1	L2	L3	D1	D2	
CT0131	125	34,5	18	28	7-36	5-30	1,5
CT0156	150	44	24	37	11-48	6-36	2
CT0181	175	50	28	42	12-56	7-40	2,5
CT0206	200	53	29	44	12-60	8-45	3,5

